





MP5000 Quick Reference Guide

Basic Operation

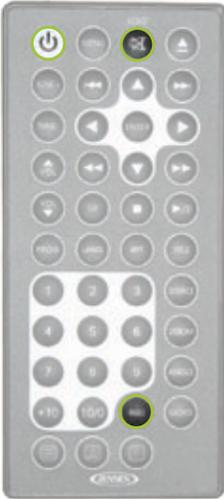

Power On/Off: Push to turn ON or OFF.


AUDIO: With each press of the button choose from the following AUDIO ADJUSTMENT options: VOLUME, BASS, TREBLE, BALANCE (left to right), & FADER (front to back).

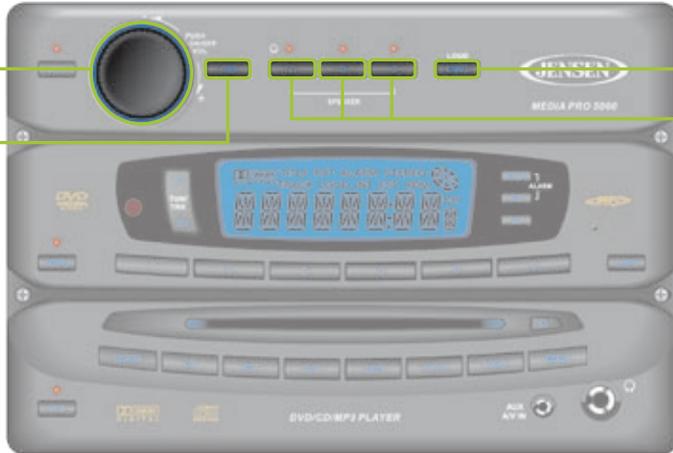

MUTE: Press to MUTE audio.


SPEAKER OUTPUT: Press any speaker button (SPEAKER A, SPEAKER B, or SPEAKER C) to control corresponding speaker output from the stereo. Red light above each button will illuminate when selected speaker is turned on.

AM/FM Tuner Controls

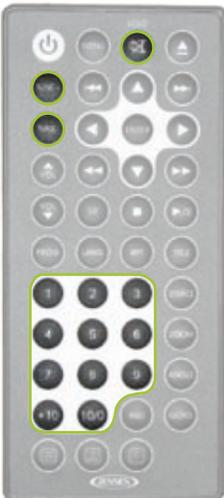

TUNE/TRACK: Press UP or DOWN to tune to next station. Press & hold UP or DOWN to SEEK to next strong station.

AM/FM: Press to directly access TUNER MODE. Press to select between two AM BANDS (AM1 & AM2) & three FM BANDS (FM1, FM2, & FM3).

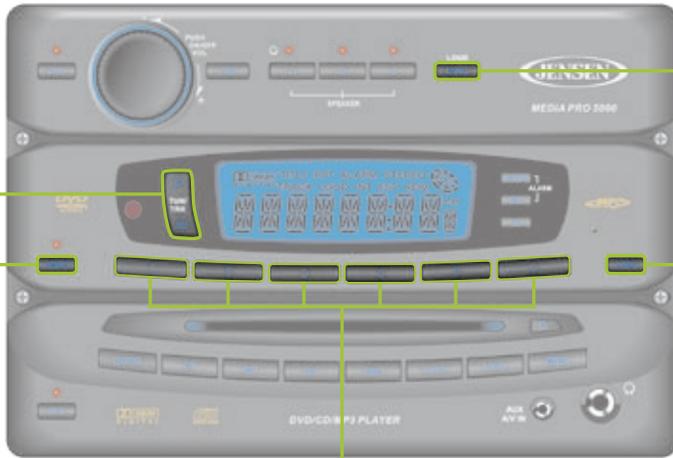


MUTE: Press to MUTE audio.

AS/PS: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.


STATION STORE BUTTONS:

Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 30 channels (5 channels per band FM1, FM2, FM3, AM1, AM2).

CD Player Controls

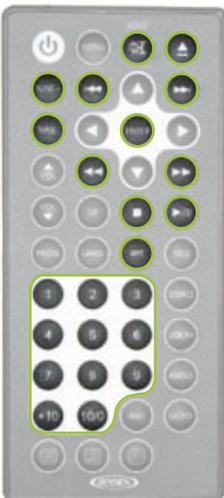

TUNE/TRACK: Press UP or DOWN to tune to next track. Press & hold UP or DOWN to FAST FORWARD or REWIND current track playing.

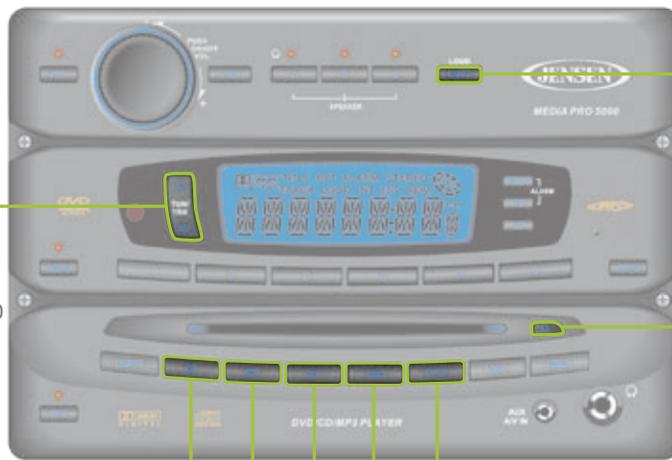

MUTE: Press to MUTE audio.

EJECT: Press to EJECT CD.

PLAY/PAUSE: Press to PLAY or PAUSE current audio.


INTRO SCAN: Press when CD is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RPT: Press to REPEAT current playing track. Press to release function.


RDM: Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play.

STOP: Press to SUSPEND disc play. Press PLAY/PAUSE to RESUME disc play.

DVD Player Controls

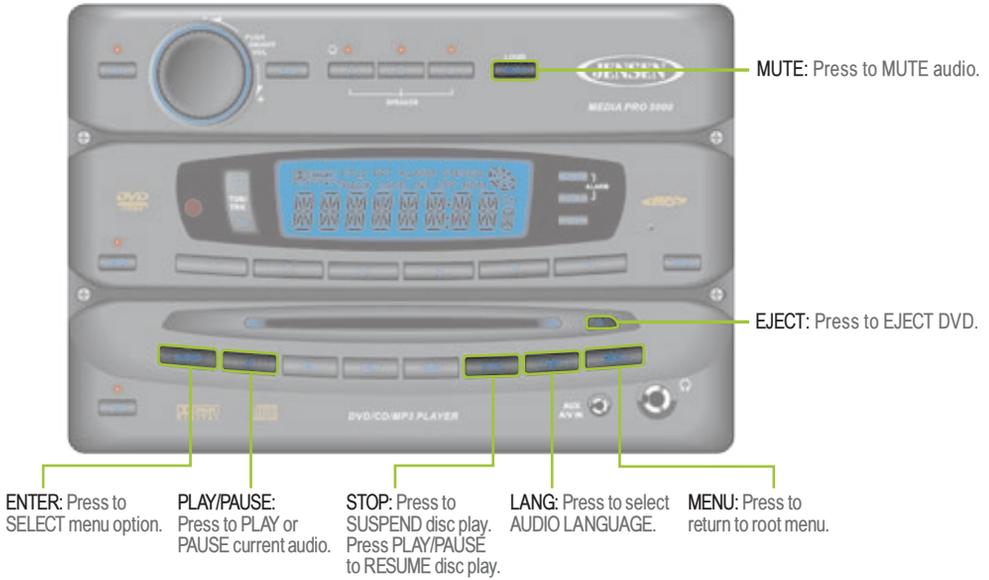

DVD Remote Controls

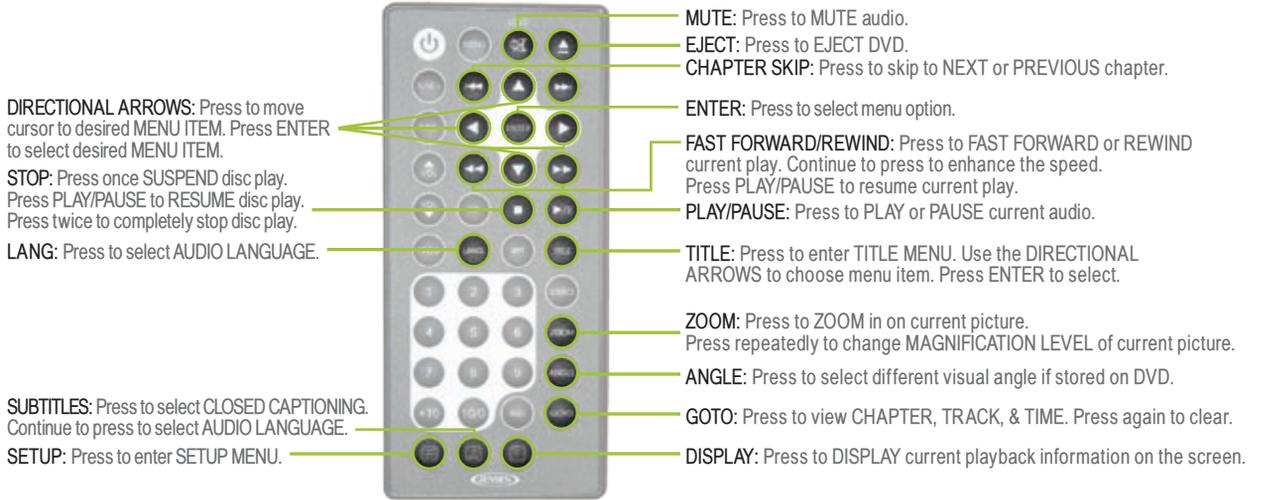

Clock Settings

