



AOM713WP Troubleshooting Guide

Monitor will not power up – no backlight on power button

- Check fuse.
- Confirm 12v+ to monitor.
- Confirm ground.
- Check vehicle's fuse and circuit for proper operation.

No image on screen

- Verify monitor is on correct camera input.
- Verify cable is connected to monitor.
- Verify camera is connected to cable.
- Connect known good camera and cable to monitor.
 - If image appears connect cable to existing camera.
 - If image remains replace original cable.
 - If image disappears replace original camera.

Image is reversed (backwards)

- Use the SETUP MENU to adjust image orientation between Mirror/Normal modes to get correct image.

Inputs do not trigger properly (Standby or otherwise)

- See owner's manual for proper wiring.
- Confirm 12v + to each appropriate trigger lead.
 - *Note:* Trigger will remain active as long as there is 12VDC+ to that wire, preventing control or access to other inputs/cameras.

No audio

- Verify selected camera supports audio.
- Verify volume setting.
- Confirm that the audio trigger (WHITE wire in monitor's power harness) is connected to 12v+.

B. Woods
Tech Services
05.03.07